


#### **SCORPION // FITTING INSTRUCTIONS**




Car	Toyota Supra A90 3.0T GPF Models	Part No.	STYP011
Year	2019-Current	Fit Kits	466FK
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 76mm

Estimated Fitting Time: 60 Minutes

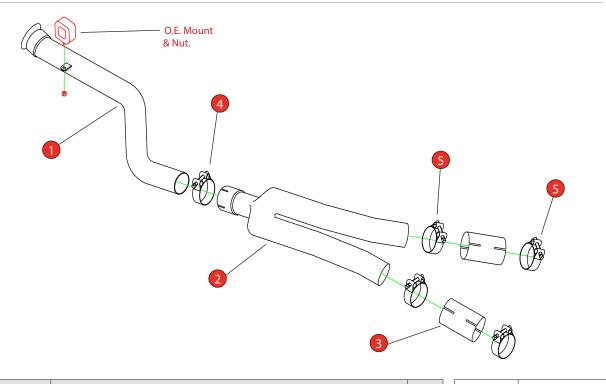

NO.	PART NO.	DESCRIPTION	QTY	DATE	21/06/2024
1	057TY	GPF Delete Front Pipe	1	ISSUE	00
0	058TY	GPF Delete Centre 'Y' Piece	-	AUTHORISED	G O'Shea
2			'		
Fit K	it: 466FK				
3	AD79	Adaptor	2		
4	Z016.10056	73-79 Clamp	1		
5	Z016.10063	74 HD Clamp	4		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

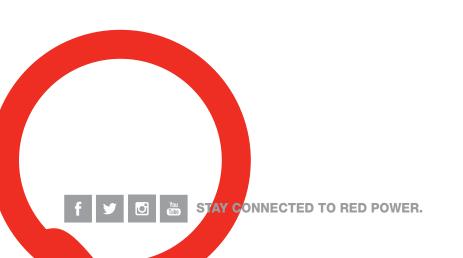





### **SCORPION** // FITTING INSTRUCTIONS

# HAND BUILT

Car	Toyota Supra A90 3.0T GPF Models	Part No.	STYP011	
Year	2019-Current	Fit Kits	466FK	
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 76mm	
Estimated Fitting Time: 60 Minutes				






## Gasket

Remove the gasket from the original exhaust and add onto the Scorpion front pipe.



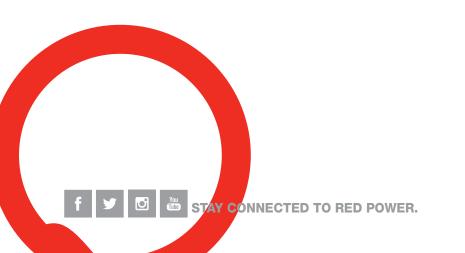






#### **SCORPION** // FITTING INSTRUCTIONS

# HAND BUILT

Car	Toyota Supra A90 3.0T GPF Models	Part No.	STYP011	
Year	2019-Current	Fit Kits	466FK	
Notes	Where not supplied use original fittings. Original system requires cutting.	Features	Pipe Diameter:- 76mm	
Estimated Fitting Time: 60 Minutes				

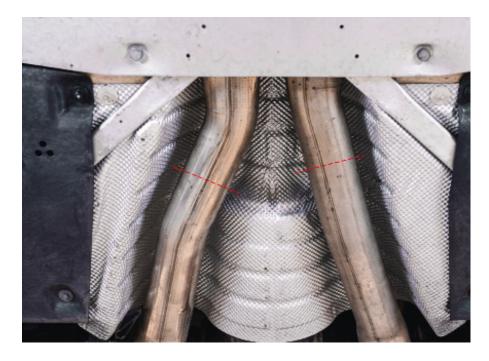

# **Cutting Instructions**

We recomend removing the original exhaust from the car before cutting.

Locate the indents on both sides of the original system.

Cut the system through the indents. Once cut, de-bur the edges and re-fit the GPF -Back section to the car.

Note: If fitting at same time as Scorpion GPF-Back system, there is no need to cut the original exhaust.



